


Lumophon W 320 und WD 320

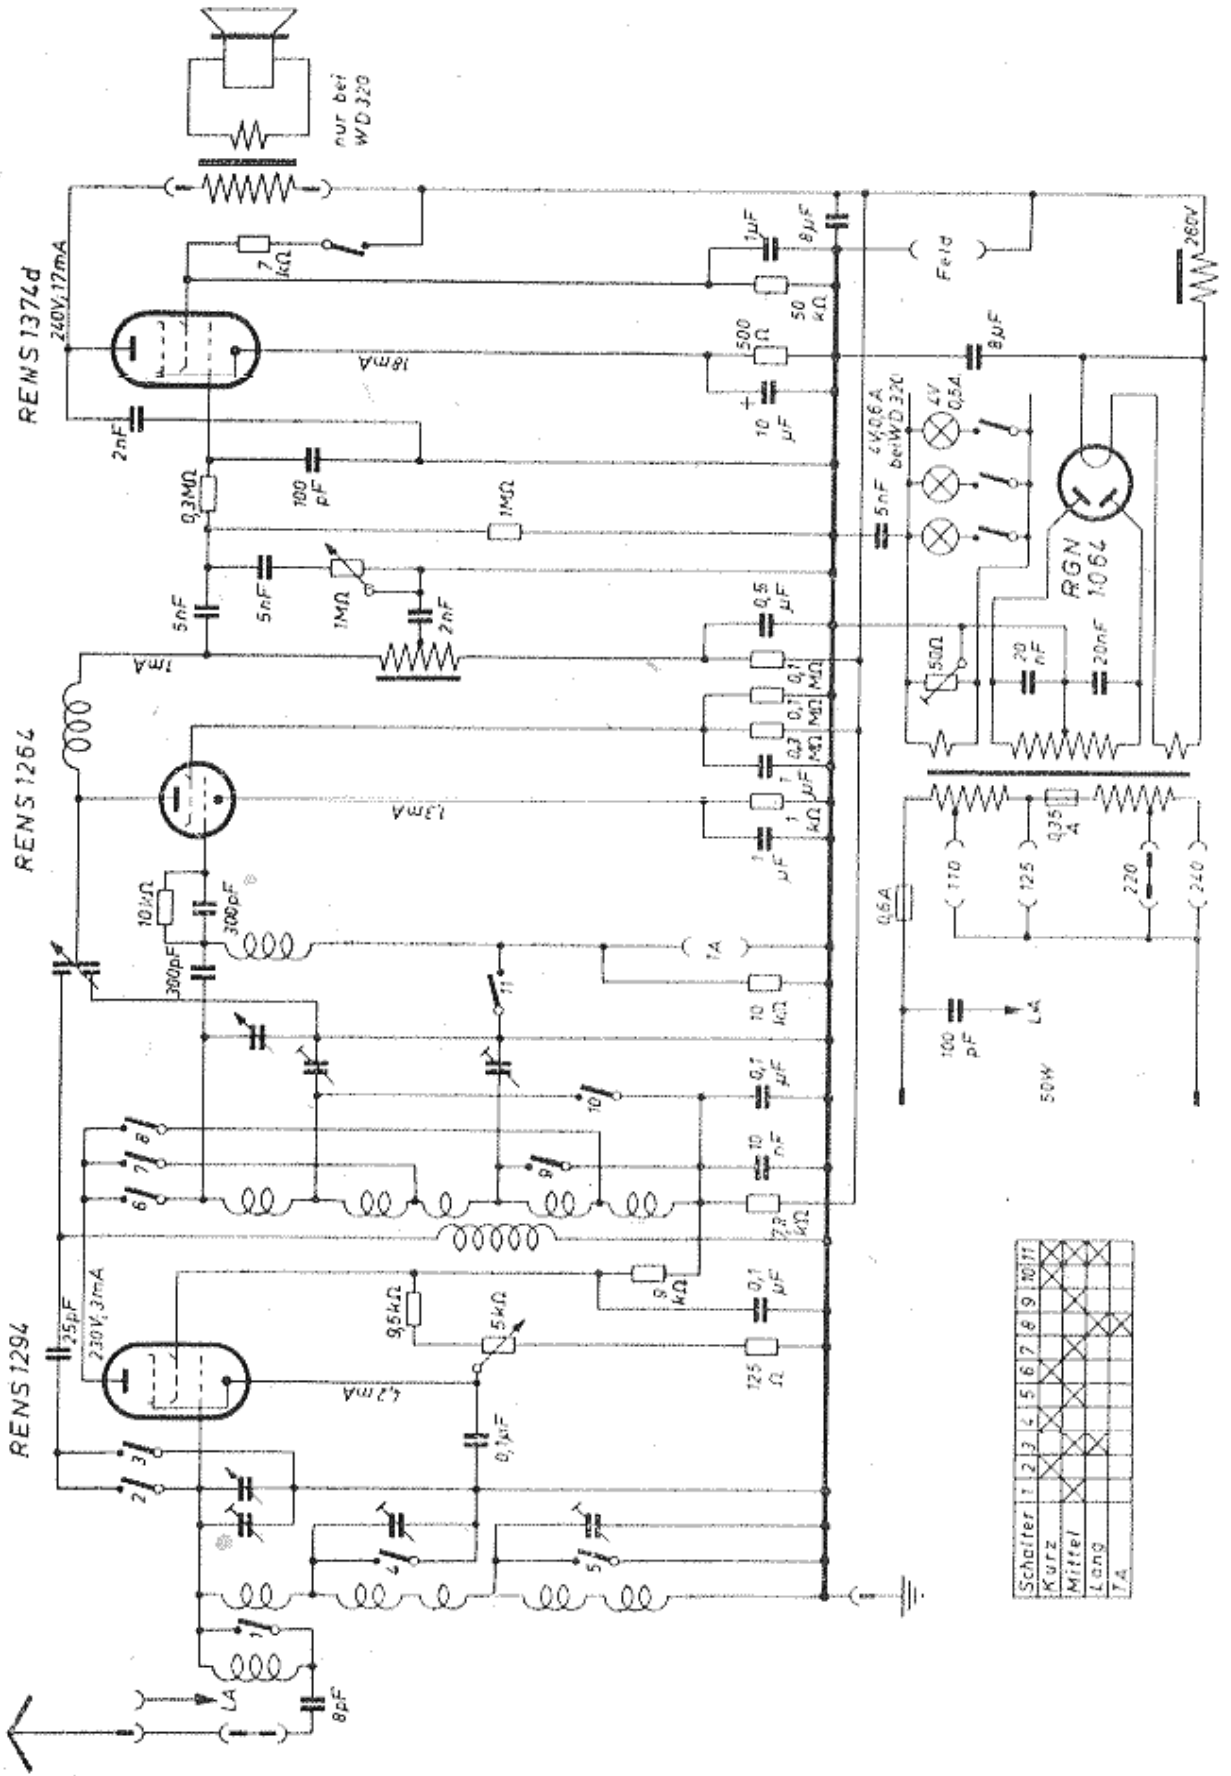

Schalter	1	2	3	4	5	6	7	8	9	10	11
Kurz											
Mittel											
Lang											
T.A.											

nur bei
WD 320